

GigaProbes™ Accessory

GigaProbes™(tm) Micro Manipulator Adapter

With Extender Adapter Option

Ordering Part Number: GPMMA

Supports Tektronix Articulated Arms
PPM203B • PPM100

Extender Adapter for attaching GigaProbes™ to PPM203B • PPM100
Articulated Arms used with probe stations or desktop probing


Features

- ◆ Attaches GigaProbes™ to Tektronix Articulated Arms
- ◆ Hands free probing
- ◆ Multipoint probing to perform TDR and TDT measurements on printed circuit boards or Device packages.


Applications

- ◆ Research, Electronic Design, Design Verification of interconnects systems.

Extender Adapter

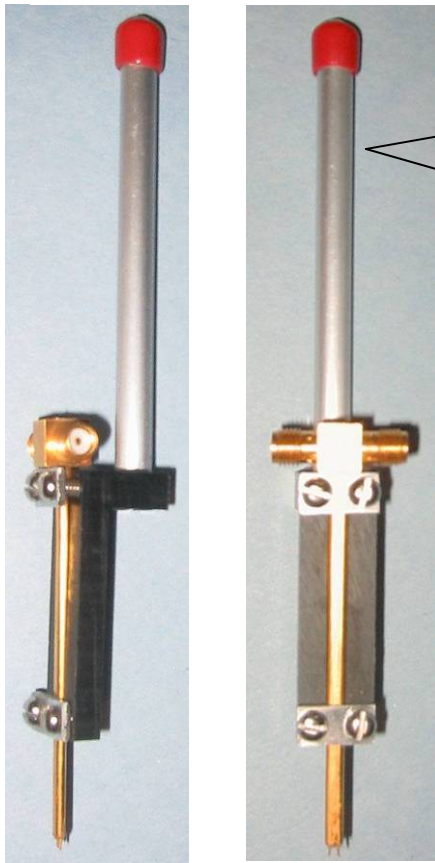

Fully assembled GigaProbes™
GPMMA with Extender Adapter

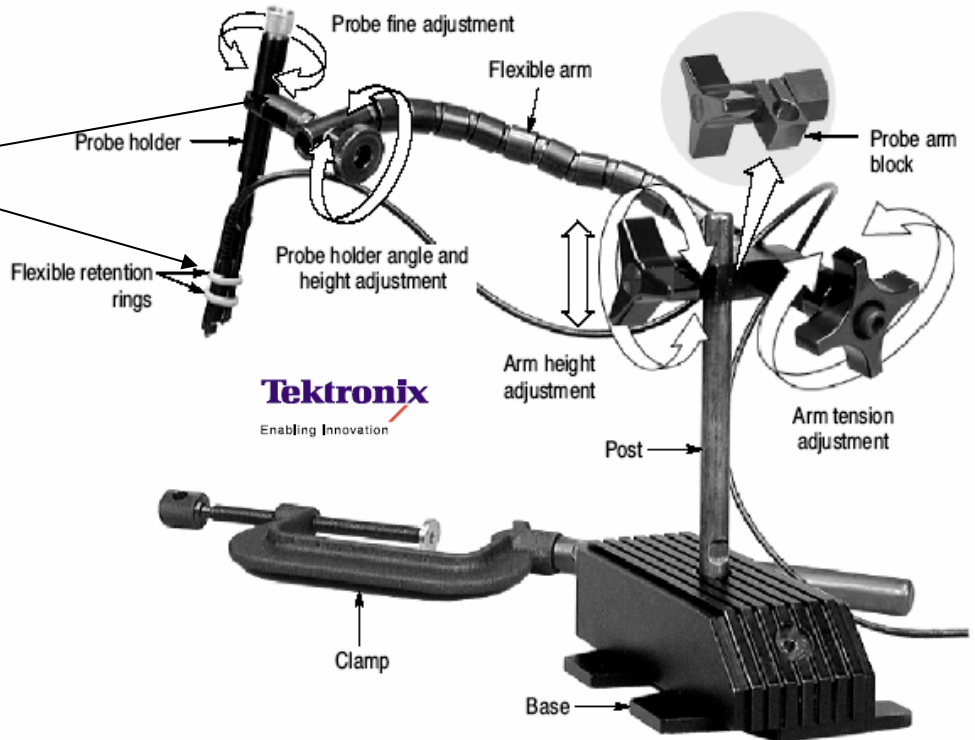

GigaProbes™ GPMMA
attaches directly to the
end of the Tektronix
PPM203B

Assembly Instructions

To attach the GigaProbes™ GPMMA probe holder to the PPM203B, attach the Extender Arm accessory with an 8-32 screw (provided). Attach the assembly to the PPM203B probe holder using the flexible retention rings. Or remove the probe holder and insert the GPMMA Extender Arm in the clamp and using the adjustment screw, close the clamp around Extender Adapter. To attach the GPMMA to the PPM203B, remove the Extender Arm and use 8-32 (provided) screw and nut to attach the GPMMA directly to the end of the PPM203B.

